


# align front of class unit - 3600 wide.


## assembly instructions.

You have received **eight** packages, including:

You will need:



2 x Front of Class Unit Bases (A and B)



2 x Front of Class Unit Tops (A and B)



2 x Front of Class Unit Sides



2 x Whiteboard Doors



Impact Driver  
SQZ Driver bit □  
Pozi Driver Bit +



1 x Top Aluminium track  
2 x Bottom Aluminium tracks  
4 x "L" Brackets (screwed into bottom track)



20 x Surefix Screws - Square  
36 x Titus Hilo Screws - Phillips  
40 x Whiteboard Screws - Square




36 x Cover Caps

**Please note:** If you have ordered multiple Front of Class Units, all eight packages for the same unit will be identified with the same letter, (e.g. Unit A). Wall fixing hardware not included.

### Step 1

Position Front of Class Unit Bases A and B into their final location and fasten together with Titus Hilo screws, using pre-drilled holes.


Tip: Fix Front of Class Unit Bases to wall prior to step 2.

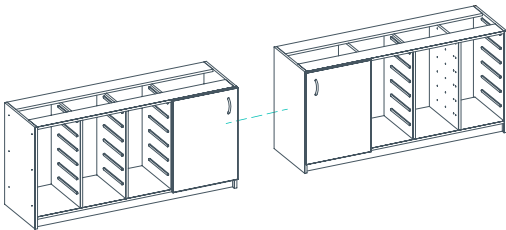

### Step 2

Place Unit Tops A and B on top of the Unit Base, ensuring sides and back are aligned. Fasten together by screwing through the top of the Unit Base with Surefix screws, using pre-drilled holes.


Tip: Fix Front of Class Unit Tops to wall prior to step 3.

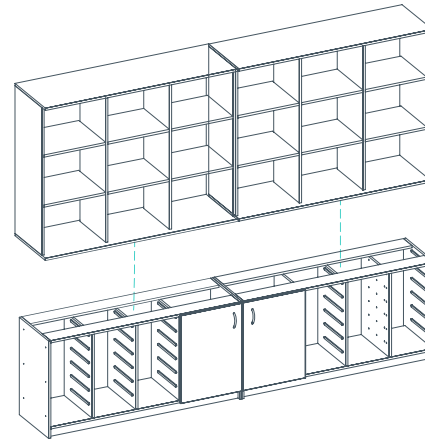

### Step 3

Screw aluminium track into place with Whiteboard screws, using pre-drilled holes (highlighted red items in drawing).

Slide Whiteboard Doors onto tracks, ensuring lockable door is at the front.

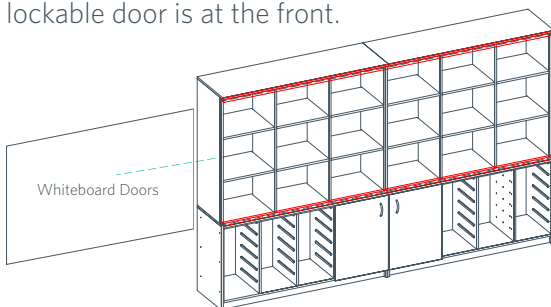

### Step 4

Once Whiteboard Doors are in place, screw on both Unit Sides using pre-drilled holes with 24 x Titus Hilo Screws. Cover screw heads with Cover Caps.

